

Country coding



danita 2000Multi



- 01 = 40Ch FM/AM 4W
- 02 = 36Ch FM/AM 4W
- 03 = 80Ch FM 4W, 12Ch AM 1W
- 04 = 40Ch FM 4W, 12Ch AM 1W
- 03 + 04 special for Germany.
- 05 = 40Ch FM 4W, AM 1W
- 06 = 40Ch FM 4W (CEPT)
- 07 = 40Ch UK Ch and 40Ch CEPT
- 08 = Poland 40Ch -5KHz

To change country mode, press UP knob “4” for 3 second, when danita 2000Multi is turned ON “2”.
Select with UP/DN knobs “4+5”.


The number 01-08 indicate the mode.

Keep DN knob “5” pressed for 3 second for store new country.

When danita 2000Multi is turned on, the display flash with two digit for a short period, showing the mode.

06 may be used in all countries. CEPT standard. 40 Ch 4W FM only.

danita 3000Multi

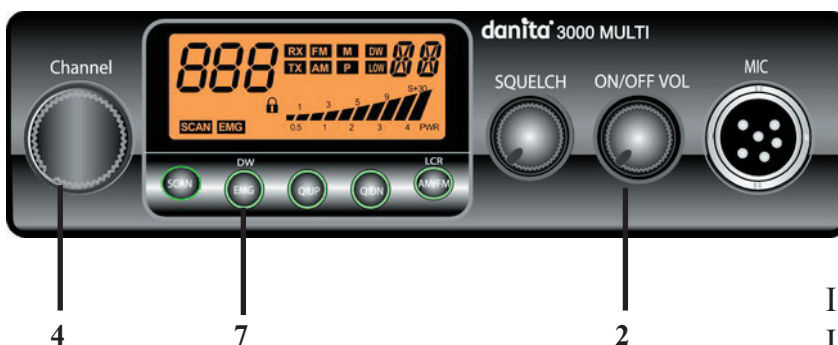

- I0 = 40Ch FM/AM 4W
- I2 = 36Ch FM/AM 4W
- DE = 80Ch FM 4W, 12Ch AM 1W
- D2 = 40Ch FM 4W, 12Ch AM 1W
- EU = 40Ch FM 4W, AM 1W
- CE = 40Ch FM 4W (CEPT)
- SP = 40Ch FM/AM 4W
- FR = 40Ch FM 4W, AM 1W
- UK = 40Ch UK and 40Ch CEPT
- PL = Poland 40Ch -5KHz

To change country mode.

Press the EMG knob (7) when turning ON (2) the CB radio.

Select country with channel selector (4).

Store by pressing the EMG knob again.

CE may be used in all countries. CEPT standard.
40 Ch 4W FM only.